


BACK DOOR TRIM

< ON-VEHICLE REPAIR >

BACK DOOR TRIM

Exploded View

INFOID:000000001183485

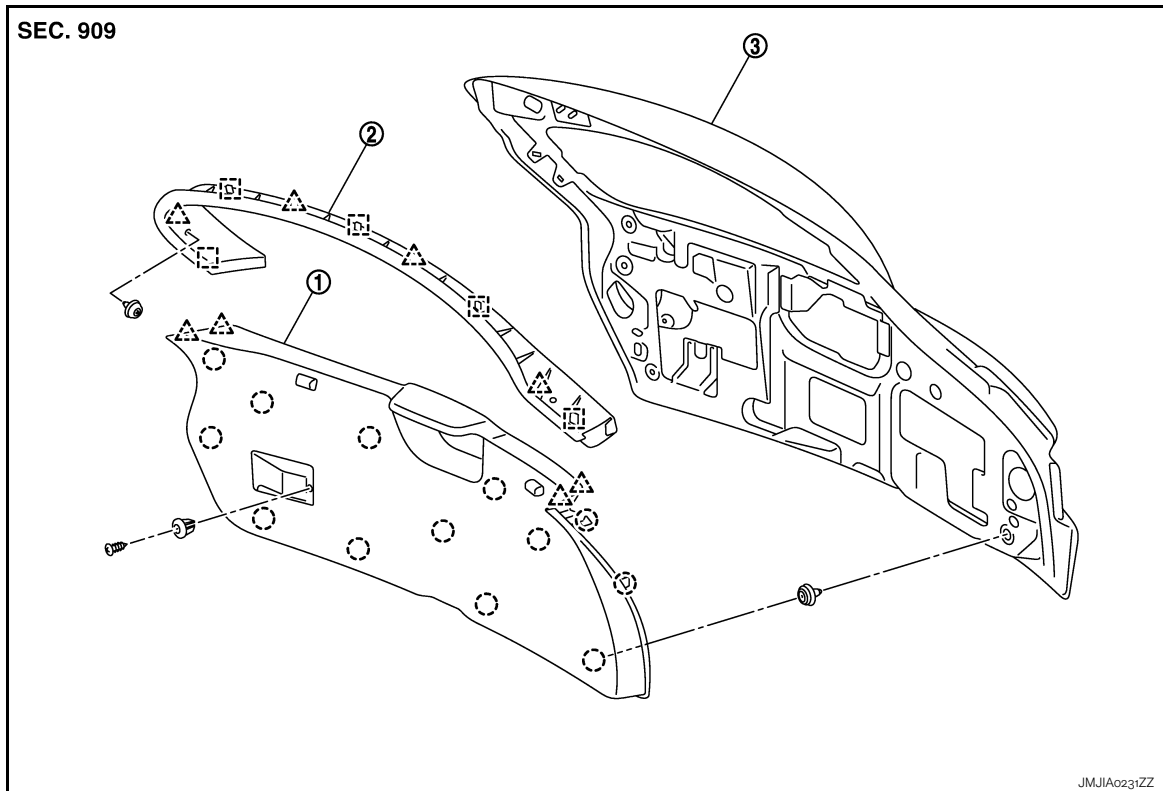


Removal and Installation

INFOID:000000001183486

REMOVAL

BACK DOOR TRIM


1. Fully open back door.
2. Remove screw tap (A) located in back door trim finisher lower (1) with screwdriver (B).

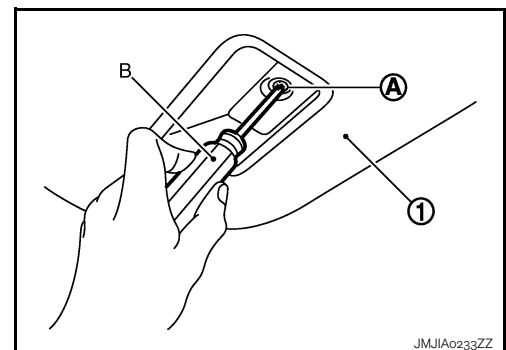

BACK DOOR TRIM

< ON-VEHICLE REPAIR >

3. Insert remover tool (A) between back door trim finisher lower and back door panel to disengage clips. Starting by the lower downwards and works around the edges and up to the sides.

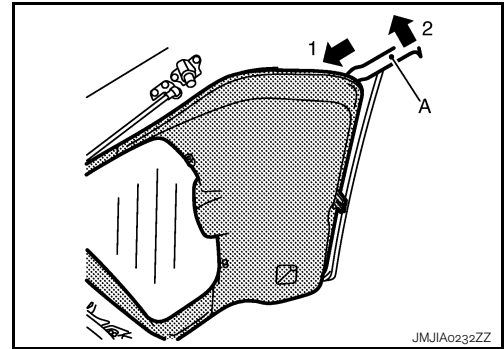

4. Pull downwards carefully the back trim finisher to disengage center clips and remove back door trim finisher.
5. Remove back door trim finisher upper.

INSTALLATION

Install in the reverse order of removal.

CAUTION:

When installing door finisher, check that clips are securely fitted in panel holes on body, and then press them in.

A
B
C
D
E
F
G
H
I
INT
K
L
M
N
O
P